

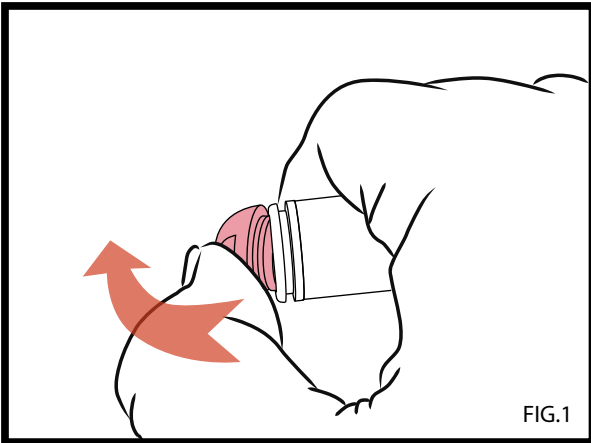
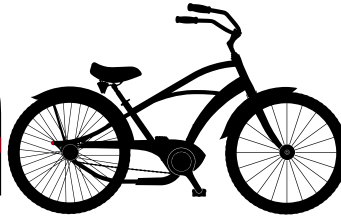


Tail Light Activation

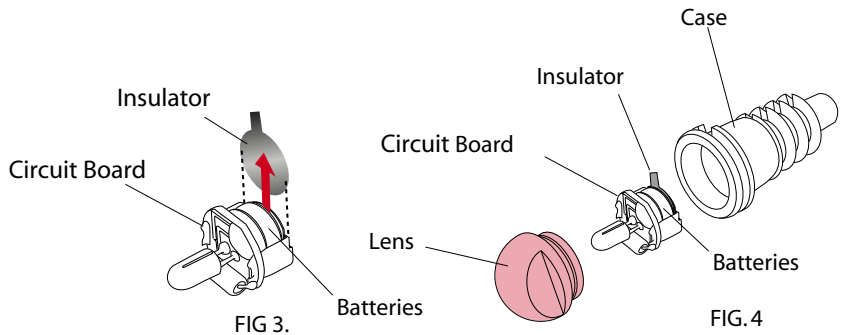


1. Remove the lens (fig.1).
2. Carefully remove the circuit/light board (fig.2).
3. Slip the insulator out of the battery tray (fig.3).
4. Replace the electronics/light board.
5. Replace the lens.

The easiest way to remove the lens is to grasp the seat stay just above the drop out and push on the side of the lens with your thumb.

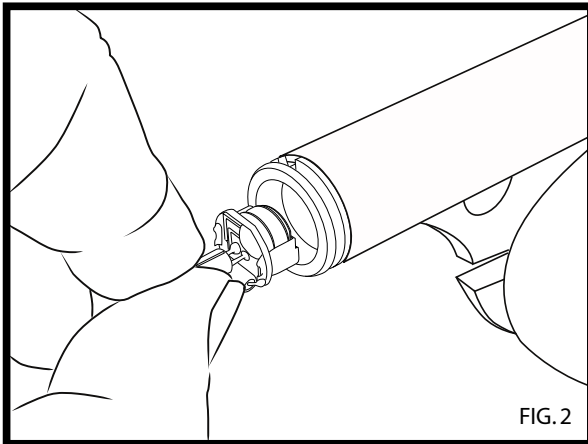

Remove the battery insulator to activate the light. The insulator is between the two batteries or the battery and the circuit board.

Remove Batteries or replace insulator when transporting your bike.
The light is motion sensitive and will remain ON as long as the bike is moving
whether you are riding it or transporting it on a car rack.

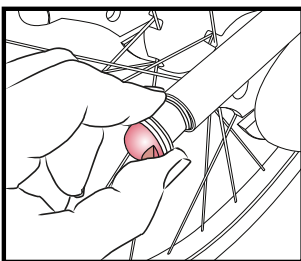

The entire unit can be removed from the frame if necessary. Grasp the black collar and pull straight out. Rocking it back and forth will make removal a little easier.

For more information or assistance, please contact your local PHAT Cycles dealer.
www.phatcycles.com

