

Maintenance Instructions

- Unplug fogger from its power source (usually outlet or humidistat).
- Turn off water supply (usually at saddle valve).
- Lift upper motor assembly from reservoir pan.
- Once a month, clean reservoir pan (tank) thoroughly with a soft brush and gentle cleaner. Empty water from reservoir pan. Make sure to rinse tank out completely.
- Water/White vinegar solution works well as do most household cleaners. Make sure to rinse tank out completely to avoid foaming during use. If calcium has accumulated, use a calcium dissolving agent to remove calcium buildup.
- Using the brush and cleaning solution, clean the fan blade, pump (cone), and spinning discs on the bottom of the upper assembly. Check also for calcium buildup and remove that too.
- Inspect float to make sure it is able to move up and down freely as well as that it is perfectly centered straight up and down.
- Remove fogger housing with three screws. Gently clean the metal atomizing screen inside upper assembly. A long toothbrush works well for this. Be gentle as it is easy to damage the metal atomizing screen.
- Remove motor cover (dome) and visually inspect motor for any signs of damage or excessive wear.
- Consult the instruction manual or visit www.hydrofogger.com to download one for more maintenance information.