


# The EZ-Riser Trailer Stand


## Operation Instructions




1. Position EZ-Riser under nose of trailer centered from both sides, ensuring the stand is positioned approximately in the middle and a few centimeters back from the nose.

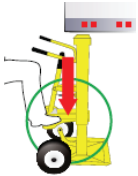


2. Step on the foot plate and press down firmly. You will release pressure on the locking mechanism. This will allow you to release the spring biased locking mechanism.

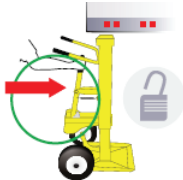

3. To release the spring biased locking mechanism; push forward on the hand lever while pressing down on the foot plate. This will allow the EZ-Riser to rise to the underside of the trailer.

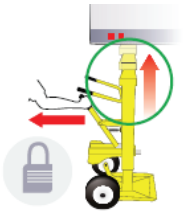

4. Once the EZ-Riser has reached the underside of the trailer, pull back on the hand lever, locking the unit into place. Note: You may need to step on the foot plate to find the closest hole for locking pin.

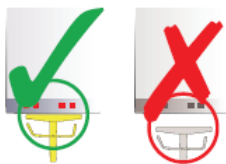

5. Ensure the EZ-Riser is as close to the underside of the trailer as possible (if not making contact). In some cases there will be a small gap between the top of the stand and the underside of the trailer.



6. Ensure the EZ-Riser is in the correct locked position to avoid potential injury to personnel or damage to equipment. The locking pin should be fully inserted through the centre mast of the stand. If the pin is not fully inserted, repeat steps 3-5.

**Caution:** If the EZ-Riser is subjected to a situation where trailer landing gear collapse has occurred, it should be replaced to ensure maximum safety.

**Notes:** Only trained people are to use the EZ-Riser. Only original parts are to be used for replacement. The EZ-Riser is to be used on solid surfaces