





# Tool-less Keystone Jack Termination Instructions

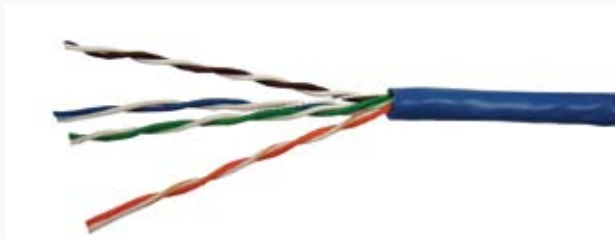


Strip of 3/4" of the cable jacket, and separate the pairs .



Select 568A or 568B from the color code on the cap.

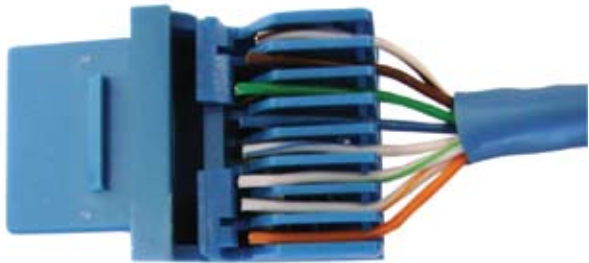

Insert the conductors according to the color code selected. (Image 2) Remember to keep the twist as close to the IDC as possible.

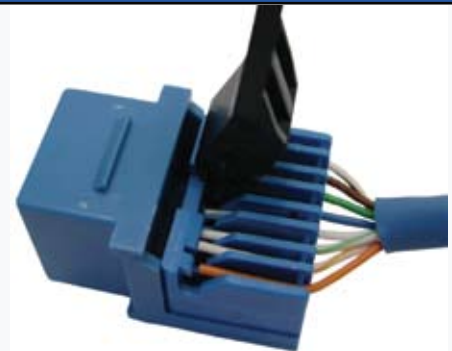

Now that the wires are in place, use the lever provided to terminate the wire into the IDC.



Snap the cap and push to lock the wires.



Insert the key-lock to lock the cap in place.