


Installation Instructions for 40mm Extendable Plumbdinger with Pop Up Waste

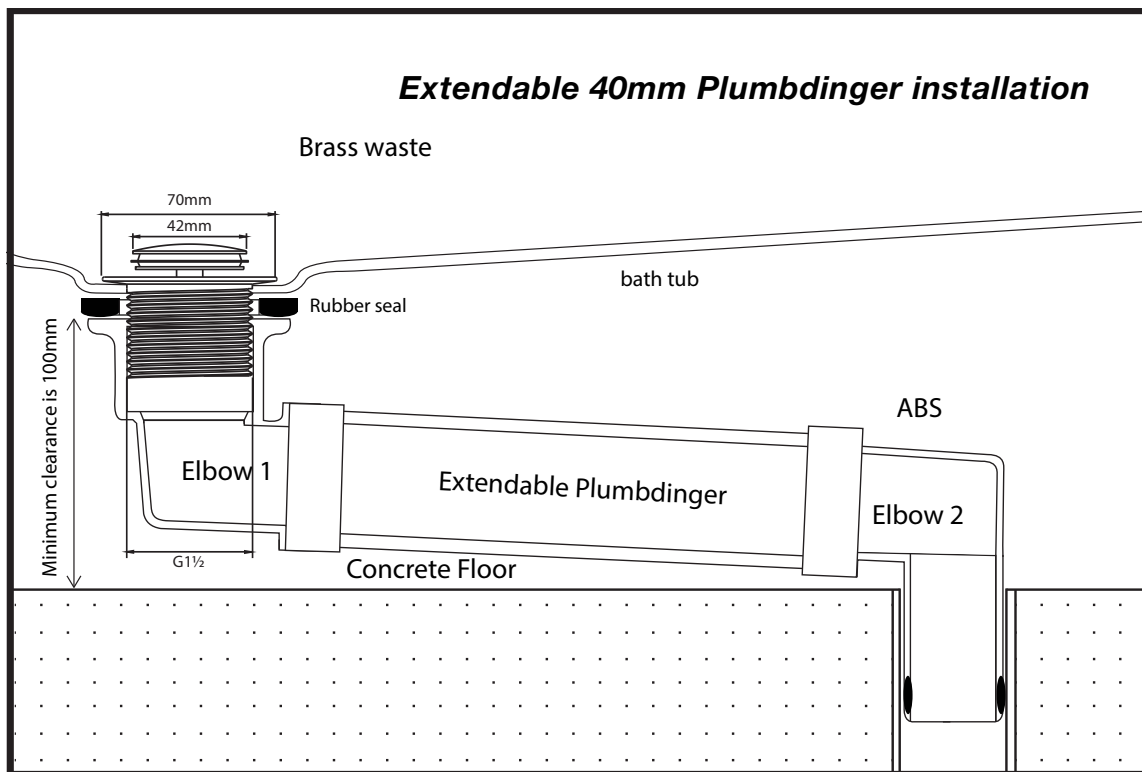

1. Measure and cut DWV pipe to size. Solvent weld pipe to elbow 2 and lubricate "O" ring on elbow 1
2. Cut floor waste to suit desired fall, lubricate "O" ring on elbow 2 and push into waste pipe
3. Connect elbow 1 to bath with rubber seal in place; apply a bead of approved sealant to internal top side surface of bath, unscrew pop up plug anticlockwise. Insert and screw in waste and firmly tighten with tool provided. Replace plug
4. Test to AS3500
5. Use only cleaners and solvent cements approved by Australian Standards