


## Installation Instructions for 40mm Extendable Plumbdinger

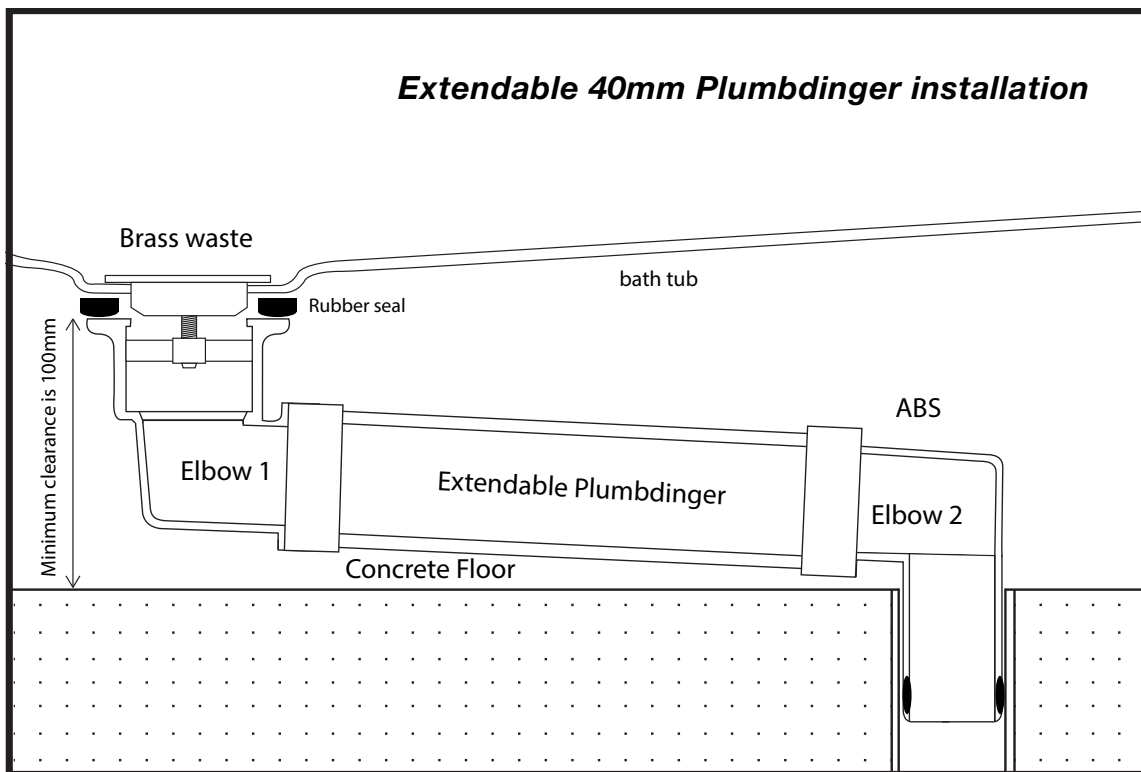

1. Install bath to a minimum height of 100mm
2. Cut floor waste to suit desired fall and de-burr
3. Cut DWV 40mm pipe to desired length and solvent weld to bottom elbow (2)
4. Lubricate "O" ring in top and bottom elbow and insert pipe
5. Line Up elbow (1) with bath outlet and put seal in place
6. Apply a bead of approved sealant on top side of bath
7. Put brass waste in place and firmly tighten screw using a hand tool only (NO POWER TOOLS)
8. Test to AS3500

Manufactured & Distributed by Tacron Industries Pty Ltd  
30 Industrial Avenue, Molendinar Qld 4214  
Ph: 07 55396955 Fax: 07 55395499  
Email: tacron1@bigpond.com