


## V75-DF & V75-DFK Plumbdinger Installation Instructions

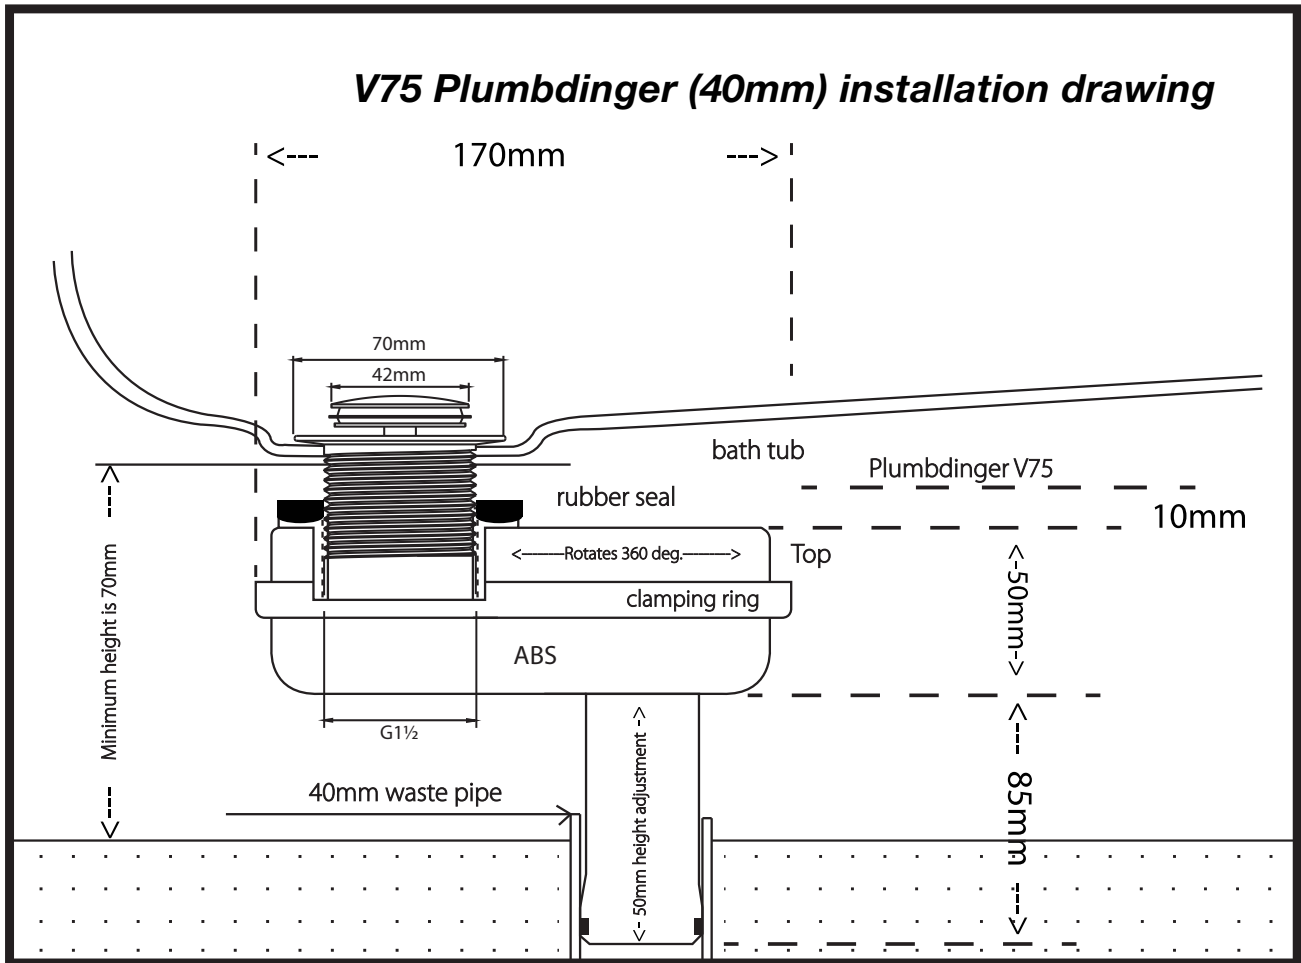

1. Measure the off-set (centre distance between waste pipe and bath waste hole).
2. Adjust the distance on the V75 Plumbdinger by rotating the upper part until outlet is aligned with outlet in bath.
3. Cut PVC waste pipe to a length to suit your bath installation (minimum distance between bath and end of waste pipe 70mm).
4. De-burr freshly cut waste pipe, lubricate "O"ring to AS3500 and insert V75 Plumbdinger into waste pipe and pull up. Line up with waste hole in bath, with rubber seal in position on underside of bath.
5. Apply a bead of approved sealant on top side of bath. Unscrew plug from waste (anti-clockwise). Insert brass pop up waste assembly through bath waste hole and screw into V75 Plumbdinger. Tighten firmly with tool provided, lining up overflow outlets (if applicable). Replace plug.
6. Test for leakage to AS3500 (DISCARD BRASS LOCKING NUT).

*The design of the V75 Plumbdinger is ideal for "Retro Fitting" by removing the clamping ring and separating the upper and lower halves which can then be very easily installed or removed in confined spaces.*