


Installation Instructions for 40mm Flexible Plumbdinger with Pop Up Plug

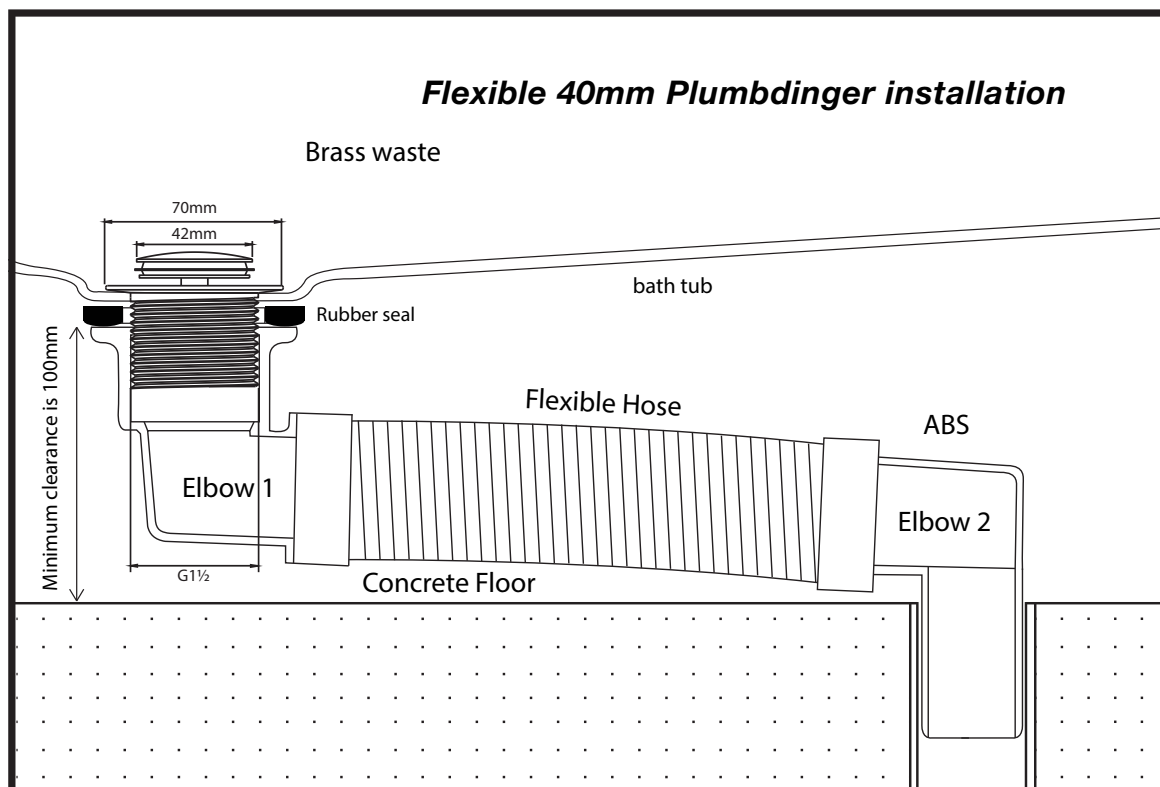

1. Cut flexible hose to size if required. Solvent weld elbow 1 & 2 to flexible hose.
2. Cut floor waste to suit desired fall, solvent weld elbow 2 in to floor waste pipe.
3. Connect elbow 1 to bath with rubber seal in place; apply a bead of approved sealant to internal top side surface of bath, unscrew pop up plug anticlockwise. Insert and screw in waste and firmly tighten with tool provided. Replace plug.
4. Test to AS3500
5. Use only cleaners and solvent cements approved by Australian Standards.
6. It is recommended that the Flexible waste pipe should not be bent tighter than 4 times the diameter.