


## INSTALLATION INSTRUCTIONS

### MODEL: 22017XX – GEAR-UP™ INLINE SKATE KIT

**THANK YOU FOR YOUR PURCHASE.** We take a **SATISFACTION GUARANTEED** approach to our products and our business. If you are not satisfied in any way, or if we can provide you with assistance or information, PLEASE call us TOLL FREE at 800-346-7332.

The GEAR-UP Inline Skate Kit (22017XX) is designed to fit either the GEAR-UP Aluminum BUA Rack or the GEAR-UP OAK Models 20093 and 20095. The Inline Skate Kit is the perfect addition to the GEAR-UP Storage System and is designed to hold ONE pair of inline skates, regardless of size.

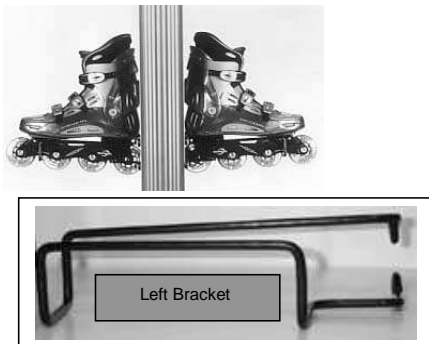

#### Bill of Material:

A.	1 ea.	22017L – Left Bracket
B.	1 ea.	22017R – Right Bracket
C.	2 ea.	80010 – Spacer Block (For OAK)
D.	4 ea.	60019 – Hex Head Screw – Gold (For OAK)
E.	1 ea.	60020 – 4mm Hex Key (For OAK)
F.	4 ea.	60003 – 5/8" SHCS (SCREW) – (For Aluminum)
G.	4 ea.	60006 – 1/4" Washer (For Aluminum)
H.	4 ea.	60032 – Slide Nut – 1 hole (For Aluminum)
I.	1 ea.	60001 – 3/16" Hex Key (For Aluminum)

## INSTALLATION:

### GEAR-UP BUA Aluminum Racks

1. Determine positioning of the Inline Skate Brackets to ensure they will not interfere with your bicycles and/or other accessories.
2. Before installing, remove all bicycles and accessories for safe keeping during the installation process. Depending on where you install the Inline Skate Holders, you may have to temporarily remove the upper or lower Bicycle Holder arms and/or other installed accessories.
3. Place the Left Inline Skate Holders facing up. See Picture above. Insert the SHCS's through washers, through the attachment loops on the Skate Holder and screw into the slide nuts. **DO NOT TIGHTEN** – leave as much slack as possible without the slide nuts falling off. NOTE: Repeat the process for the Right Inline Skate Bracket.
4. From STEP 3, insert the slide nuts into the side channels of the main body of your BUA Rack and gently move to the desired position. Once positioned, tighten the SHCS's with the 3/16" Hex Key.
5. Re-install any removed Bicycle Arms and/or Accessories and your bicycles.

### GEAR-UP OAK Storage Racks

1. Determine positioning of the In-line Skate Brackets to ensure they will not interfere with your bicycles and/or other accessories.
2. Before installing, remove all bicycles and accessories for safe keeping during the installation process.
3. Position Left Inline Skate Bracket. Insert Gold Screws through the attachment loops and screw partially into side frame. Insert spacer blocks, and tighten the gold screws with the 4mm Hex Key. Repeat process for the Right In-line Skate Bracket.
4. Re-install your bicycles and accessories.